

ec
by **wilfa**



SMOOTHDRY PRO

HAIR DRYER HD3G-1800

EN • Instruction manual

Congratulations on your new hair dryer!

For more information and the instruction manual in multiple languages, simply scan the QR code.

 
If you wish, you can register your product in the app for easy access later.

 


- Scan the QR code to access the instruction manual in your language.
- Scan QR koden for å lese bruksanvisningen på ditt språk.
- Skanna QR-koden för att läsa bruksanvisningen på ditt språk.
- Scan QR-koden for at læse brugsanvisningen på dit sprog.
- Skannaa QR-koodi lukeaksesi käyttöoppaan omalla kielelläsi.
- Scannen Sie den QR-Code, um die Bedienungsanleitung in Ihrer Sprache zu lesen.
- Scan de QR-code om de gebruiksaanwijzing in uw taal te lezen.
- Zeskanuj kod QR, aby przeczytać instrukcję obsługi w swoim języku.
- Scannez le code QR pour lire le manuel d'instructions dans votre langue.
- Scansiona il codice QR per leggere il manuale di istruzioni nella tua lingua.
- Escanea el código QR para leer el manual de instrucciones en tu idioma.
- Nuskaitykite QR kodą, kad pasiektumėte naudojimo instrukciją savo kalba.
- Skenējiet QR kodu, lai piekļūtu lietošanas instrukcijai savā valodā.
- Juhendi lugemiseks oma keeles skannige QR-koodi.

PRODUCT OVERVIEW


1. Display and temperature control knob
2. Cool shot
3. Power switch/ Airflow settings
4. Lock
5. Removable filter cap
6. Concentrator
7. Diffuser
8. Slim concentrator

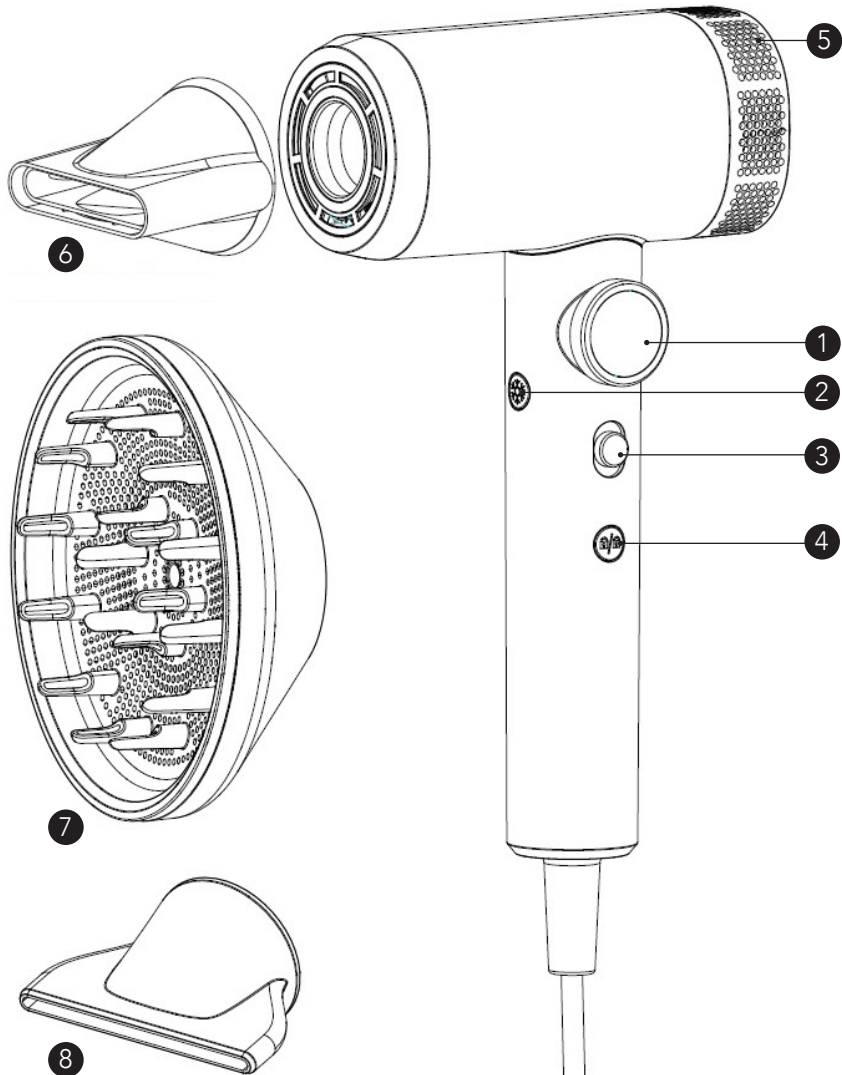

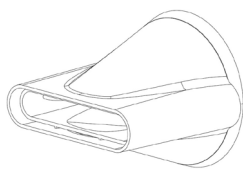


CONCENTRATOR

 Use the concentrator to remove frizz and create a sleek finish. Use with a round brush to create volume and bounce.

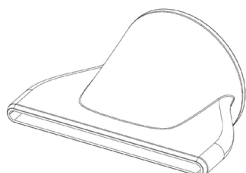

SLIM CONCENTRATOR

 Use the concentrator for precise styling and drying. Great to use with a round brush to create volume, waves and soft curls.

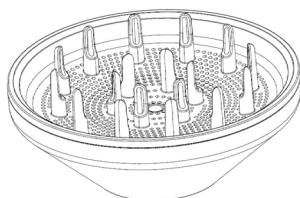

DIFFUSER

Ideal for drying curly and wavy hair. Start with hovering around your head to gently dry the roots. Place sections of hair into the diffuser and scrunch upwards towards the roots.

USE

 
1. Ensure your hands are completely dry and the power switch is set to off before plugging in the appliance.
2. Push up the power switch to turn on the hair dryer. Choose between two speed levels.
3. The default temperature setting is "Cold". Turn the knob to adjust the temperature. It can be adjusted from 45°C to 125°C with 5°C intervals.
4. Press and hold the cool shot button for a burst of cold air to set your style.
5. Short press the lock button to lock the current temperature setting. The power switch/ airflow settings will not be locked.
6. The attachments are easy to install and remove using the magnetic click-on system.
7. When finished, turn off and unplug the hair dryer.

CLEANING AND MAINTENANCE

- Unplug the hair dryer and ensure it is completely cool before cleaning.
- Wipe the exterior of the hair dryer with a slightly damp cloth.


Close

Open

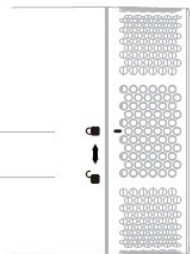

Filter:

 - Twist the removable filter cap anticlockwise to remove it.
- Use a small brush to remove dust and debris from the filter and inside the filter cap.
- Do not use water!
- Clean the filter weekly to prevent airflow blockage.

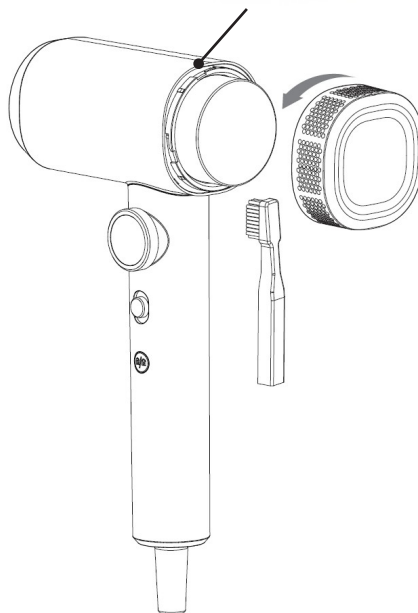

PRODUCT SPECIFICATIONS

220-240V~ 50/60Hz 1800W

110 000 RPM

The appliance will enter the off mode in less than 1 minute after pressing the on/off button. The power consumption in off mode is 0.2W.

SUPPORT AND SPARE PARTS

For support please visit us at **ecbywilfa.com**, and see our customer service/support page. Here you will find frequently asked questions, spare parts, tips and tricks and all our contact information.

RECYCLABILITY

This marking indicates that this product should not be disposed with other



household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling free of charge.

GUARANTEE

EC by Wilfa issues a 5 year guarantee on this product from the day of purchase. The guarantee covers production failure or defects that



arise during the guarantee period. Your purchase receipt works as proof towards retailer if claiming your guarantee.

The guarantee is valid only for products that are bought and used in private households. The guarantee is not valid if the product is used commercially. The guarantee is not valid if the product is misused, used by negligence, if not following instructions given by EC by Wilfa, if modified or if unauthorized reparation is done. The guarantee is also not valid for normal wear of the product, misuse, lack of maintenance, use of wrong electrical voltage or:

- Damage caused by misuse, negligence, or lack of maintenance
- Normal wear and tear (e.g., filters, fuses, batteries)
- Damage from external factors (drops, moisture, power surges)
- Use of non-original parts or unauthorized repairs
- Damage caused by residue from styling products (spray, mousse, wax)
- Tight wrapping or stressing the cord around the product.

These instructions are also available at our website www.ecbywilfa.com

ec
by **wilfa**



HD3G-1800_20_01