



SMOOTHSTRAIGHT PRO

HAIR STRAIGHTENER HST4G-1000

EN • Instruction manual

Congratulations on your new hair straightener!

For more information and the instruction manual in multiple languages, simply scan the QR code.


If you wish, you can register your product in the app for easy access later.



- Scan the QR code to access the instruction manual in your language.
- Scan QR koden for å lese bruksanvisningen på ditt språk.
- Skanna QR-koden för att läsa bruksanvisningen på ditt språk.
- Scan QR-koden for at læse brugsanvisningen på dit sprog.
- Skannaa QR-koodi lukeaksesi käyttöoppaan omalla kielelläsi.
- Scannen Sie den QR-Code, um die Bedienungsanleitung in Ihrer Sprache zu lesen.
- Scan de QR-code om de gebruiksaanwijzing in uw taal te lezen.
- Zeskanuj kod QR, aby przeczytać instrukcję obsługi w swoim języku.
- Scannez le code QR pour lire le manuel d'instructions dans votre langue.
- Scansiona il codice QR per leggere il manuale di istruzioni nella tua lingua.
- Escanea el código QR para leer el manual de instrucciones en tu idioma.
- Nuskaitykite QR kodą, kad pasiektumėte naudojimo instrukciją savo kalba.
- Skenējiet QR kodu, lai piekļūtu lietošanas instrukcijai savā valodā.
- Juhendi lugemiseks oma keeles skannige QR-koodi.

PRODUCT OVERVIEW

1. Air outlet
2. Lock switch
3. Removable filter cap
4. Display
5. Wet/dry mode
6. Temperature button
7. Air speed button
8. Cool shot
9. On/Off button

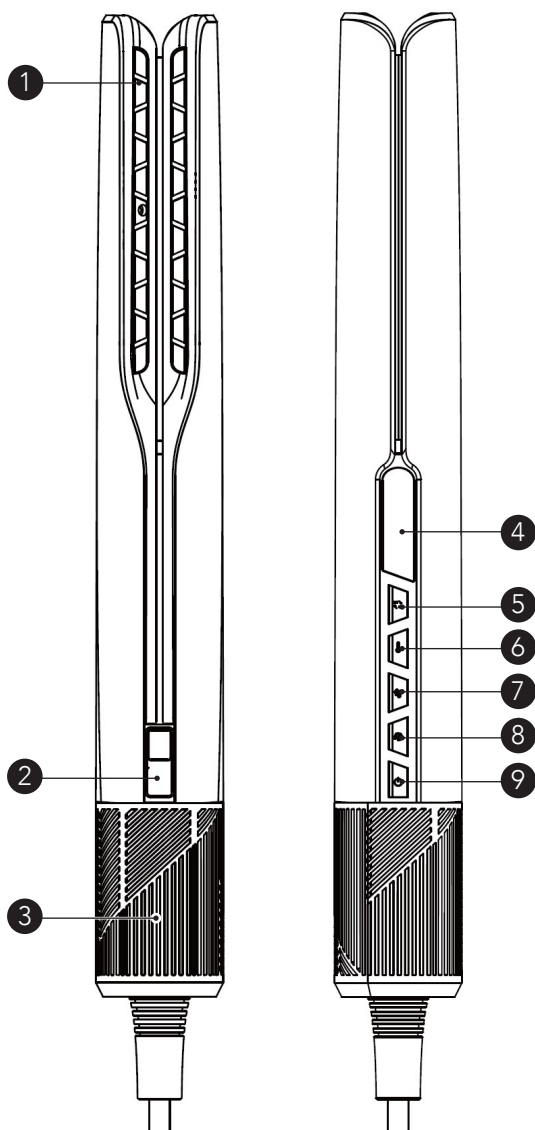

Button overview



Wet/dry mode

Press the button to switch between the dry and wet hair modes.

Wet mode: 160°C, air speed 3

Dry mode: 90°C, air speed 3



Temperature

Short press the button to adjust the temperature. There are 5 levels: COL-90-120-140-160. It cycles from low to high, high to low.



Air speed

Press the button to adjust the air speed. There are three speed settings.



Cool shot


Press the button to use the cool shot function. Press again to go back to the temperature it was set on before pressing cool shot.



On/Off

Press to turn on. Long press to turn off.

Display

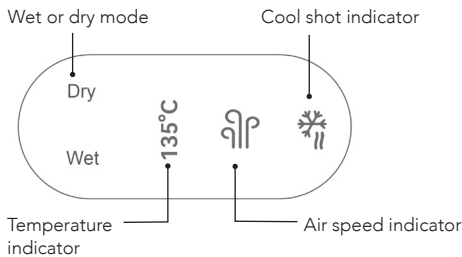

BEFORE USE

1. Ensure your hands are completely dry and the power switch is set to off before plugging in the appliance.
2. Ensure your hair is tangle-free before straightening.
3. Use heat protection to minimize damage.

USE

Hair type	Temperature
Fine, damaged, bleached hair	Cold-90
Normal, healthy hair	120-140
Coarse, thick hair	140-160

1. Press the on/off button to switch on the appliance.
 2. Push the lock switch upwards to unlock the clamps.
 3. Use the buttons to select the desired functions and adjust them to your preference.
 4. The airflow starts automatically when you close the clamps to straighten.
 5. Use the cool shot to set your style.
- If the hair straightener is switched on and the clamps are open, it will go into protection mode after 10 seconds, and a P will show on the display. Just close the clamps to activate the airflow again.

CLEANING AND MAINTENANCE

- When cleaning the appliance, ensure it is unplugged.
- Use a soft cloth to wipe off the surface.
- Do not wind the cord around the appliance.
- Store it in the included travel bag.

Filter:

- Pull down the removable filter cap to access the filter.
- Use a small brush to remove dust and debris from the filter and inside the filter cap.
- Do not use water!
- Clean the filter weekly to prevent airflow blockage.

Cleaning function:

- Long press the air speed button for 5 seconds to start the cleaning function. The display will show "20", and it will stop automatically after 20 seconds.
- After 24 hours of use, the cleaning function will light up on the display, indicating that cleaning is needed.

TROUBLESHOOTING

Problem	Possible reason	Solution
The appliance does not work after pressing the on/off button	Check whether the power cord is plugged in properly	Connect the correct power supply
	Check if the power cord is damaged.	If the power cord is damaged, contact customer support
Error code E	The voltage is not correct	Please connect to the correct voltage range

PRODUCT SPECIFICATIONS

220-240V~ 50/60Hz 1000W

After connecting to the power supply, the appliance enters standby mode in less than 1 minute. The power consumption in standby mode is 0.79W.

SUPPORT AND SPARE PARTS

For support please visit us at ecbywilfa.com, and see our customer service/support page. Here you will find frequently asked questions, spare parts, tips and tricks and all our contact information.

RECYCLABILITY



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling free of charge.

GUARANTEE

EC by Wilfa issues a 5 year guarantee on this product from the day of purchase. The guarantee covers production failure or defects that arise during the guarantee period.

Your purchase receipt works as proof towards retailer if claiming your guarantee.



The guarantee is valid only for products that are bought and used in private households. The guarantee is not valid if the product is used commercially. The guarantee is not valid if the product is misused, used by negligence, if not following instructions given by EC by Wilfa, if modified or if unauthorized reparation is done. The guarantee is also not valid for normal wear of the product, misuse, lack of maintenance, use of wrong electrical voltage or:

- Damage caused by misuse, negligence, or lack of maintenance
- Normal wear and tear (e.g., filters, fuses, batteries)
- Damage from external factors (drops, moisture, power surges)
- Use of non-original parts or unauthorized repairs
- Damage caused by residue from styling products (spray, mousse, wax)
- Tight wrapping or stressing the cord around the product.

These instructions are also available at our website www.ecbywilfa.com



HST4G-1000_20_01