



FLOWSTYLE PRO

MULTISTYLER MS2G-1200

EN • Instruction manual

Congratulations on your new multistyler!

For more information and the instruction manual in multiple languages, simply scan the QR code.

If you wish, you can register your product in the app for easy access later.




- Scan the QR code to access the instruction manual in your language.
- Scan QR koden for å lese bruksanvisningen på ditt språk.
- Skanna QR-koden för att läsa bruksanvisningen på ditt språk.
- Scan QR-koden for at læse brugsanvisningen på dit sprog.
- Skannaa QR-koodi lukeaksesi käyttöoppaan omalla kielelläsi.
- Scannen Sie den QR-Code, um die Bedienungsanleitung in Ihrer Sprache zu lesen.
- Scan de QR-code om de gebruiksaanwijzing in uw taal te lezen.
- Zeskanuj kod QR, aby przeczytać instrukcję obsługi w swoim języku.
- Scannez le code QR pour lire le manuel d'instructions dans votre langue.
- Scansiona il codice QR per leggere il manuale di istruzioni nella tua lingua.
- Escanea el código QR para leer el manual de instrucciones en tu idioma.
- Nuskaitykite QR kodą, kad pasiektumėte naudojimo instrukciją savo kalba.
- Skenējiet QR kodu, lai piekļūtu lietošanas instrukcijai savā valodā.
- Juhendi lugemiseks oma keeles skannige QR-koodi.


PRODUCT OVERVIEW

1. Release button
2. Cool shot
3. Fan speed button
4. Temperature button
5. On/Off switch
6. Air inlet / removable filter cap
7. 360° swivel cord
8. Lock switch

Attachments:

- a. Oval concentrator
- b. Slim concentrator
- c. Curling round brush
- d. 60mm oval brush
- e. Flat brush
- f. Right and left turning air barrel

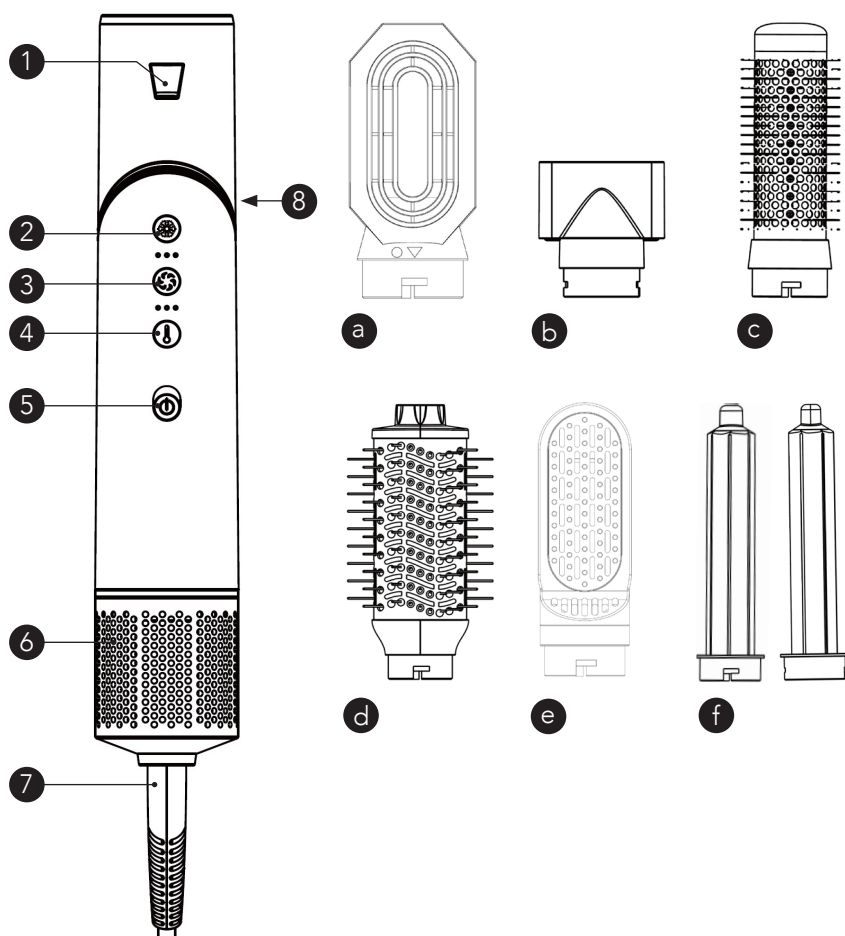


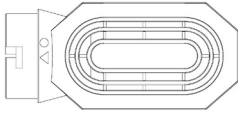

OVAL CONCENTRATOR


Use the concentrator to use your multistyler as a hairdryer.

Direct the airflow onto the hair and move the multistyler around the head to remove excess moisture.

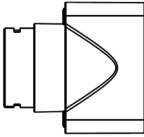

SLIM CONCENTRATOR

Use the slim concentrator for precise styling and drying. Great to use with a round brush to create volume, waves and soft curls.

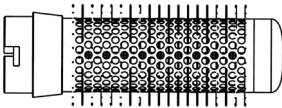

CURLING ROUND BRUSH


The curling round brush is perfect to add volume and slight curls to your hair.

Begin with 80% dry hair.

Section your hair.

Brush from the roots to the ends.

Roll up the hair. When it is dry, finish with cold air to set the style.

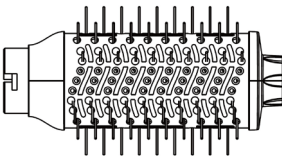

OVAL BRUSH

The oval brush (60mm) is ideal for root lift and volume.

Begin with 80% dry hair.


Section your hair.

Start under the hair close to the roots.

Lift the hair at the roots to create volume.

Slowly move it down from the roots to the tips.

Finish with cold air to set the style.

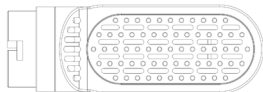

FLAT BRUSH

Use the flat brush to get straighter, frizz-free hair with volume.

Note: Ensure your hair is completely tangle-free before using this attachment.

Section your hair.

Place the brush to lift the hair at the roots and slowly brush downwards to the tips until dry.



LEFT AND RIGHT CURLING BARRELS

Begin with 80-90% dry hair.

Select the direction of the hair by choosing the left or right barrel.

Section your hair.

Hold the section about 10cm from the ends and slowly bring the barrel towards the ends until it starts to curl around the barrel.

When the ends are wrapped, let go of the section and slowly bring the barrel up to the roots. Hold for 8-10 seconds and finish with cold air for 8-10 seconds. Turn off the multistyler before pulling the barrel down.

USE

Temperature	Hair type
Low	Fine, damaged or bleached hair
Medium	Normal healthy hair
Hot	Coarse, thick hair

- Select your preferred attachment. Place it onto the appliance with the circle aligning with the arrow and turn it clockwise towards the arrow symbol to fasten it.
- Plug in the appliance.
- Push the on/off button to turn it on.
- Adjust fan speed by pressing the fan speed button. It cycles through low, medium and high speed.
- Press the temperature button to adjust the temperature. It cycles from cool, low, medium and high heat.
- Style as desired.
- To change attachments, press down the release switch, turn it anticlockwise and pull up. Note: Do not remove attachments while hot!

Folding function:

- If you prefer a 90-degree angle, push the switch to unlock, fold the top part of the multistyler to the right and push the switch to lock.

CLEANING AND MAINTENANCE

After use:

- Unplug the appliance and ensure it is completely cool before cleaning.
- Wipe the exterior of the appliance with a slightly damp cloth.
- Pull down the removable filter cap. Use a brush to remove dust and debris from the filter. Do this weekly to prevent airflow blockage. **Do not use water!**
- Ensure the appliance is completely cool before storing it in the included travel bag.

PRODUCT SPECIFICATIONS

220-240V~ 50-60Hz 1200W
110 000 RPM

The appliance will enter the off mode in less than 1 minute after pressing the on/off button. The power consumption in off mode is 0W

SUPPORT AND SPARE PARTS

For support please visit us at wilfa.com, and see our customer service/support page. Here you will find frequently asked questions, spare parts, tips and tricks and all our contact information.

RECYCLABILITY



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling free of charge.

GUARANTEE

EC by Wilfa issues a 5 year guarantee on this product from the day of purchase. The guarantee covers production failure or defects that arise during the guarantee period. Your purchase receipt works as proof towards retailer if claiming your guarantee.



The guarantee is valid only for products that are bought and used in private households. The guarantee is not valid if the product is used commercially. The guarantee is not valid if the product is misused, used by negligence, if not following instructions given by EC by Wilfa, if modified or if unauthorized reparation is done. The guarantee is also not valid for normal wear of the product, misuse, lack of maintenance, use of wrong electrical voltage or:

- Damage caused by misuse, negligence, or lack of maintenance
- Normal wear and tear (e.g., filters, fuses, batteries)
- Damage from external factors (drops, moisture, power surges)
- Use of non-original parts or unauthorized repairs
- Damage caused by residue from styling products (spray, mousse, wax)
- Tight wrapping or stressing the cord around the product.

These instructions are also available at our website www.ecbywilfa.com

ec
by **wilfa**



MS2G-1200_20_01